


CASSETTE PLAYER

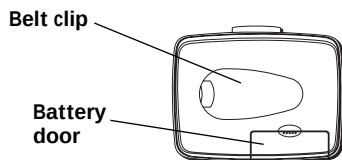

BATTERY INSTALLATION

1. Remove the battery door by pushing down and sliding it off.
2. Insert two AA-size alkaline batteries (not included) as shown on the cabinet back. Make sure the strap is underneath the batteries.
3. Replace the battery door.

REMOVEABLE BELT CLIP

To remove the belt clip, lift the tab and slide the clip down.


IMPORTANT BATTERY INFORMATION

- Alkaline batteries are recommended for best results. Using Nickel-Cadmium rechargeable batteries may result in shorter playing time.
- If you're not going to use your unit for a month or more, be sure to remove batteries because they can leak and damage the unit.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, if all batteries are not replaced at the same time, if disposed of in fire, or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

CAUTION/CARE

Do not expose the unit to extreme temperatures, such as those caused by a hot stove or the inside of a car parked in the summer sun. Extreme temperatures can damage the unit. Clean with a soft cloth dampened with water only.

Cleaning the Heads: Iron oxide particles from magnetic tape eventually build up on parts that touch the tape. This can cause a muffled sound. Use liquid head cleaner or a head cleaning tape to clean the heads.

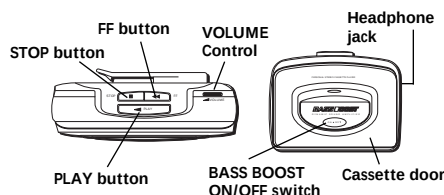

TO INSERT OR REMOVE CASSETTE

1. Open cassette door.
2. Insert a tape by sliding it gently into the door (with exposed tape facing outward and full reel of tape to the right).
3. Close the door.

TAPE OPERATION

1. Plug headphones into the jack on the side of the unit and set the volume to the minimum level. (Always set volume to minimum level and then adjust to desired volume after headphones are in place.)
2. Adjust VOLUME.
3. Turn BASS BOOST to ON to enhance bass frequencies.
4. To turn unit off, press STOP.
5. To skip over a portion of the tape, press F.F. Press STOP when you have advanced to the desired place on the tape.

AUTOMATIC STOP

When the end of the tape is reached in PLAY mode, the unit automatically shuts itself off and returns the PLAY button to the off position.

SERVICE

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty in this guide.

Attach your sales receipt for future reference, or write down the date you purchased or received this product as a gift. This information will be valuable if service should be required during the warranty period.

Purchase Date _____

Name of Store _____

LIMITED WARRANTY

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to: **Thomson Consumer Electronics, Inc. Product Exchange Center 32 Spur Drive El Paso, Texas 79906**
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you prepaid freight.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

HAVE A BLAST – JUST NOT IN YOUR EARDRUMS

Make sure you turn down the volume on the unit before you put on the headphones. Increase the volume to the desired level only after headphones are in place.



THOMSON CONSUMER ELECTRONICS

©1998 Thomson Consumer Electronics, Inc.
Trademark(s) ® Registered
Marca(s) ® Registradas